

Quick Setup

This guide provides how to boot the MVC system and initialize the system for administrators.

Initial Setup

Once the MCore/Mini-PC/MCore Pro is powered on, the MCore/Mini-PC/MCore Pro will load the Microsoft Windows 10 IoT Enterprise operating system automatically.

Before setting up the MVC system, you need to connect a mouse to MCore/Mini-PC to complete the initial configuration. We recommend using the wireless mouse kit.



Log In for the first time

After initializing the system, you can use MTouch II to log in and set up the system. The device will automatically launch the Microsoft Teams Rooms Systems and enter the setup page.

Support using Skype for Business or Microsoft Teams accounts to log in to the system.

1. Select the check box on the **EULA** page, then select **Next**.

Setup App version 4.16.40.0 Windows version 10.0.19044.2846 Provisioning version 15

EULA

Account

Cortana

Advanced

Finish

Microsoft Software License Terms

Last updated March 2020

MICROSOFT SOFTWARE LICENSE TERMS
MICROSOFT TEAMS ROOMS APPLICATION

Thank you for choosing Microsoft!

Depending on how you obtained the software, this is a license agreement between (i) you and the device manufacturer or software installer that distributes the software with your device; or (ii) you and Microsoft Corporation (or, based on where you live or if a business where your principal place of business is located, one of its affiliates) if you acquired the software from a retailer. Microsoft is the device manufacturer for devices produced by Microsoft or one of its affiliates, and Microsoft is the retailer if you acquired the software directly from Microsoft.

This agreement describes your rights and the conditions upon which you may use the software. You should review the entire agreement, including any supplemental license terms that accompany the software and any linked terms, because all of the terms are important and together create this agreement that applies to you.

By clicking this box you agree to the above Software License Terms and acknowledge that you have read the privacy statement at <https://aka.ms/privacy>

Exit **Next**

2. Enter the Skype for Business account and password on the **Account** page, and then select **Next**.

NOTE

You can also choose the desired mode in the “Supported meeting mode” , and different modes will have different interfaces.

The screenshot shows the 'Setup' wizard in the 'Account' step. The left sidebar contains 'EULA', 'Account' (selected), 'Cortana', 'Advanced', and 'Finish'. The main area has the following fields: 'Email' (example@example.com), 'Password' (Password), 'Supported meeting mode' (Microsoft Teams only), and a 'Modern Authentication' toggle switch which is turned on. At the bottom right are 'Back' and 'Next' buttons.

Setup App version 4.16.40.0 Windows version 10.0.19044.2846 Provisioning version 15

EULA

Account

Cortana

Advanced

Finish

Email

example@example.com

Password

Password

Supported meeting mode

Microsoft Teams only

Modern Authentication

Back Next

3. Configure **Domain / username (optional)** and select **Next** on the **Advanced** page.

The screenshot shows the 'Setup' wizard in the 'Advanced' step. The left sidebar contains 'EULA', 'Account', 'Cortana', 'Advanced' (selected), and 'Finish'. The main area has the following fields: 'Exchange sign-in (usually same as Teams or Skype)' (example@company.onmicrosoft.com), 'Domain\username (optional)' (domain\example123), and 'Configure domain' (domain1.company.com, domain2.company.com, domain3.company.com ...). At the bottom right are 'Back' and 'Next' buttons.

Setup App version 4.16.40.0 Windows version 10.0.19044.2846 Provisioning version 15

EULA

Account

Cortana

Advanced

Finish

Exchange sign-in (usually same as Teams or Skype)

example@company.onmicrosoft.com

Domain\username (optional)


domain\example123

Configure domain

domain1.company.com, domain2.company.com, domain3.company.com ...

Back Next

4. Select **Finish** to complete the setup wizard.

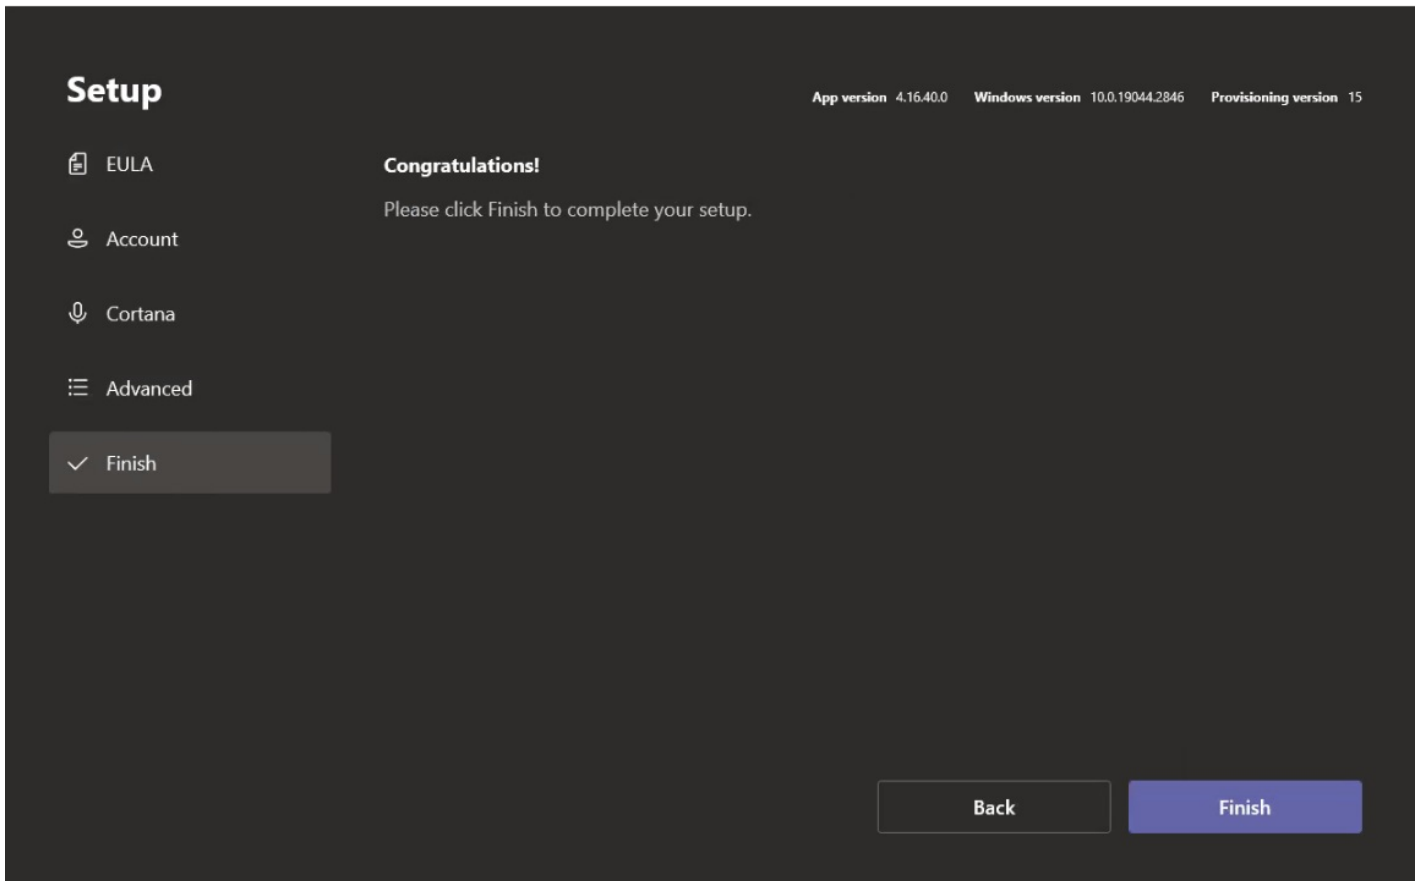
**NOTE**

For more information on planning, deploying, and managing your Microsoft Teams Rooms system, see [Microsoft Teams Rooms](#).

Check Network

You need to connect the MCore/mini-PC to the network port by a network cable. You can also check whether the MTouch II is connected to the network.

1. In the Microsoft Teams mode, select **More > Settings** to enter the administrator password (default: sfb).
2. Go to **About > IPv4** to check whether the network is connected.

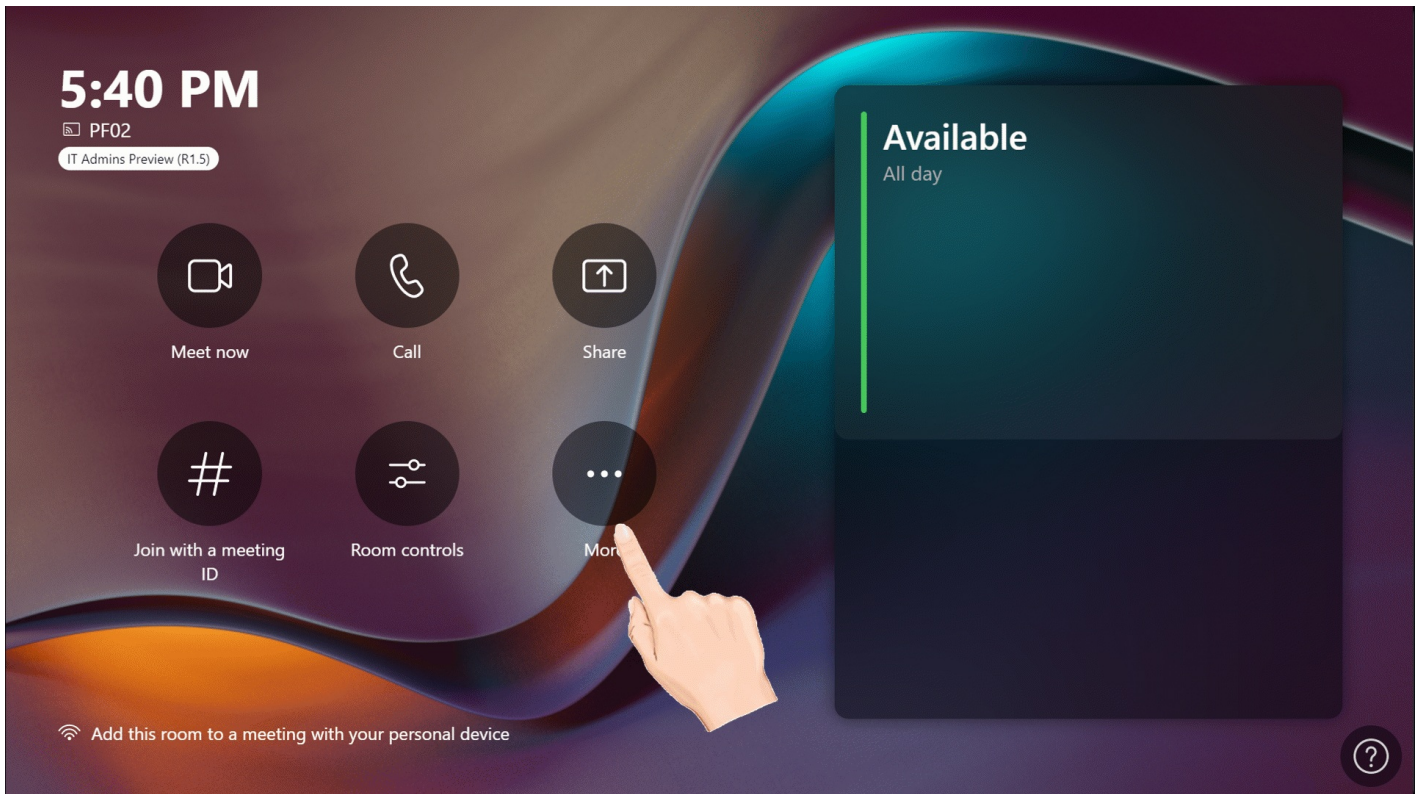**NOTE**


If the Mtouch II interface shows that “This device isn’t connected to the Internet”, you need to check whether the network cable is connected correctly.

Account Settings


Log In for the first time

After logging in to your account for the first time, you can follow the steps below to switch accounts.

1. In the Microsoft Teams mode, go to **More > Settings** to enter the administrator password (default: sfb).
2. Go to **Account** to enter the new Email and Password.
3. Select **Save and Exit**.

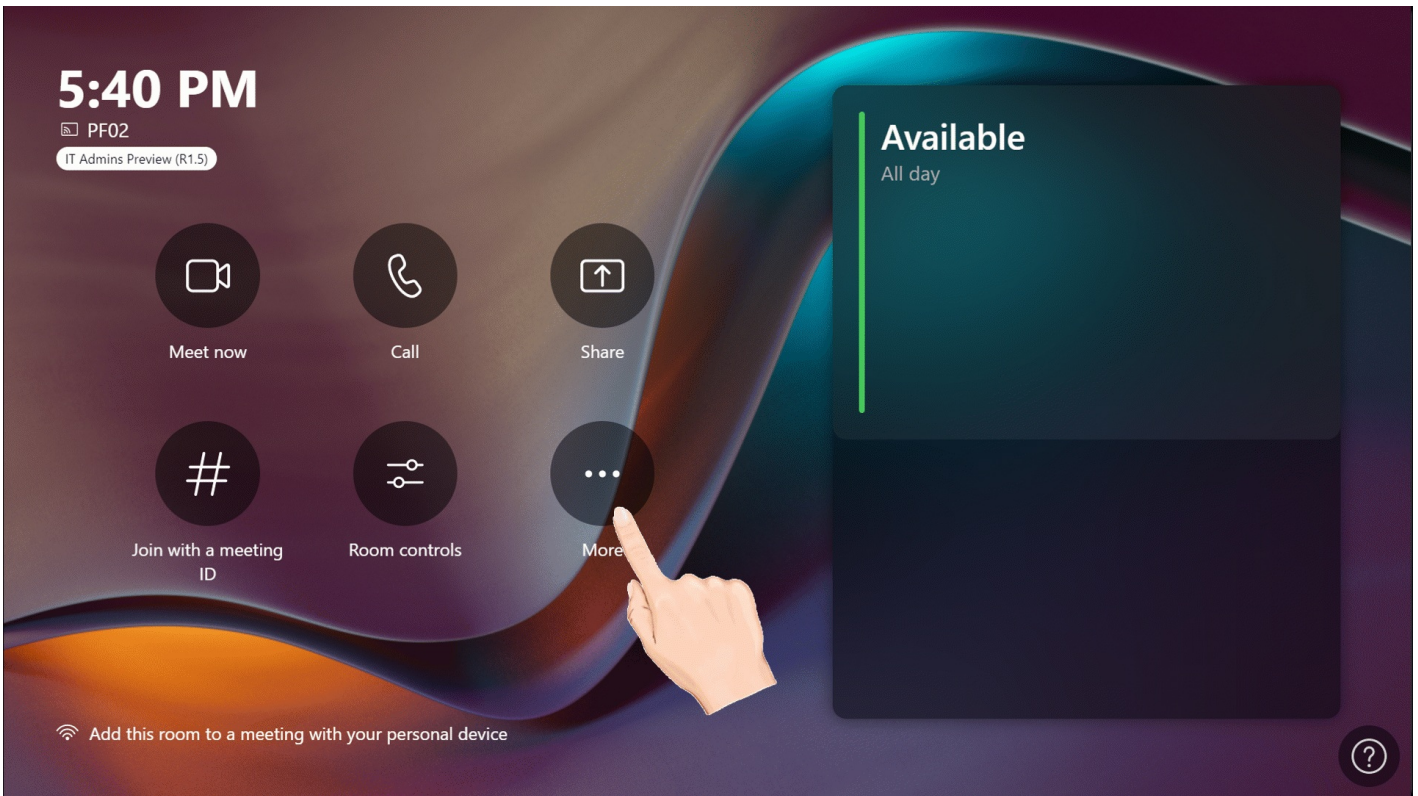

NOTE
You can select the “Supported meeting mode” according to your needs.

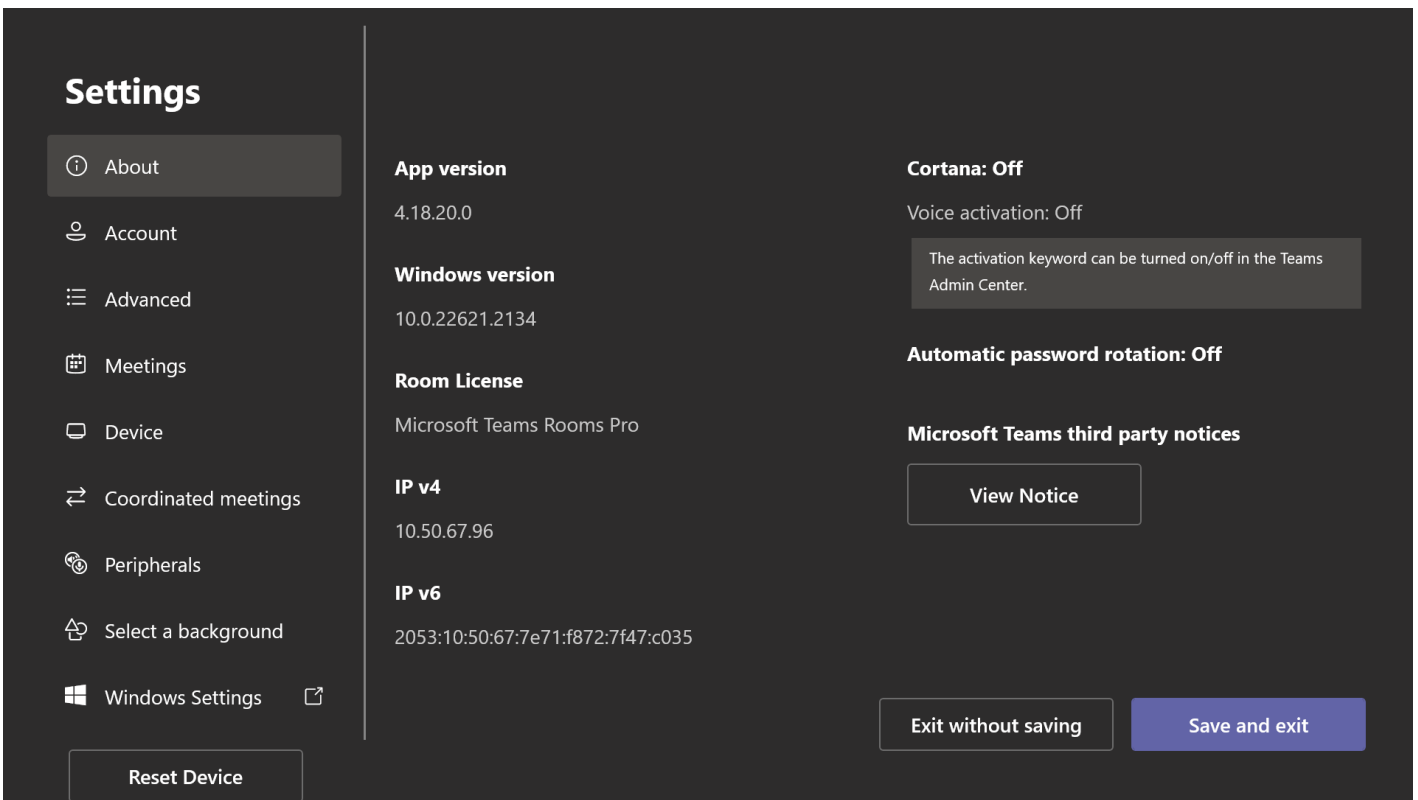

Switch Account

- By default, the MVC systems have two built-in Windows accounts (Skype user and administrator accounts).

Skype for Business account: It is limited to running the Microsoft Teams Rooms and the default recommended account when the system starts. You can use the Skype for Business account to log in to the Microsoft Teams Rooms System automatically without a password, but it does not have administrator privileges.

Administrator account: The administrator account can perform any operation on the Microsoft Teams Rooms System but requires a password (default: sfb). The administrator account is only applicable to the MVC. You do not need an administrator account when you participate in Skype for Business meetings or Teams meetings.


- The operation interface is Microsoft Teams mode when logging in to your Skype account to the system. The operation interface is Windows mode when logging in to the administrator account. You can switch between these two modes at will.

► Switch to Administrator Account

NOTE

Switching the Microsoft Teams Mode to the Windows Mode.

1. In the Microsoft Teams mode, go to **More > Settings** to enter the password (default: sfb).
2. Select **Windows Settings > Administrator** to enter the password (default: sfb).

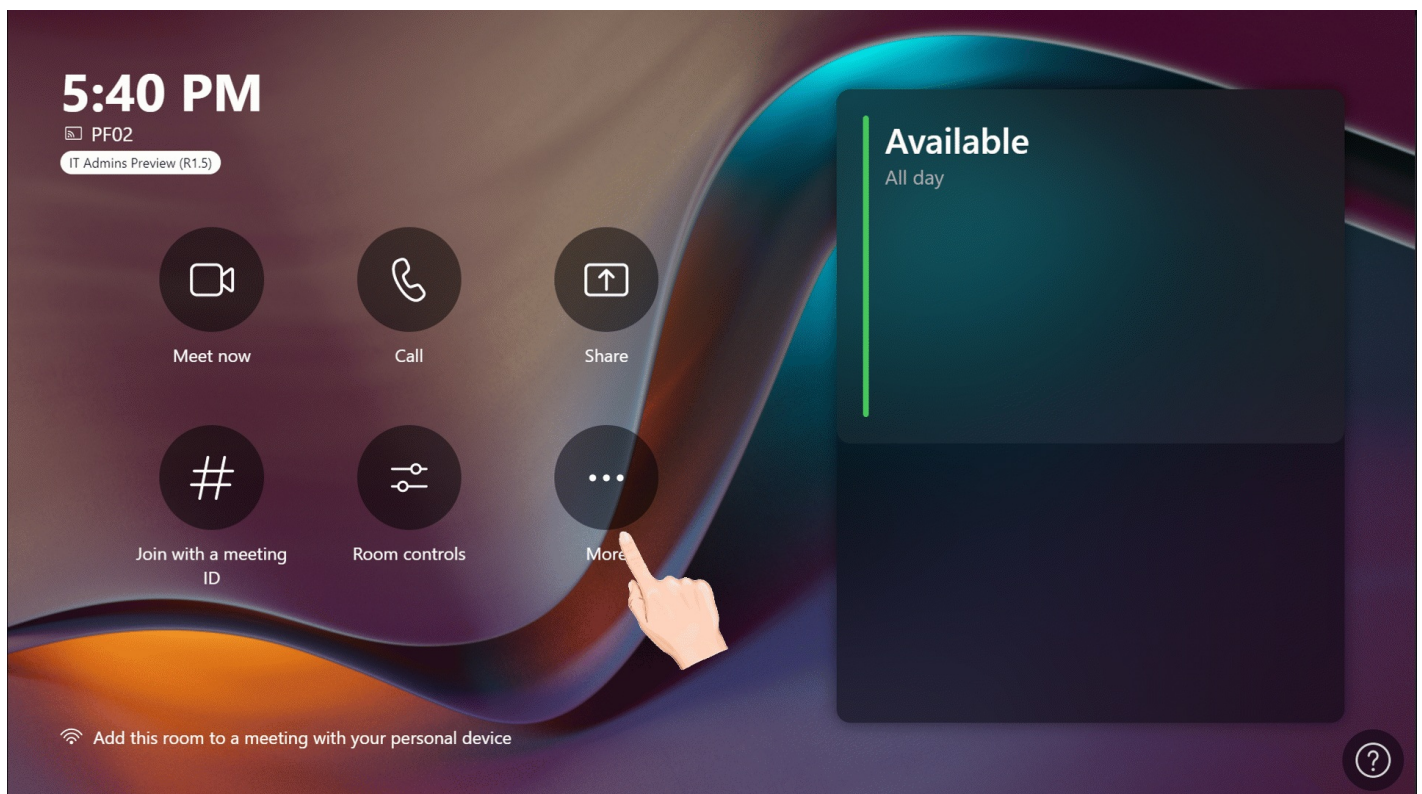


► Switch to Skype for Business Account

NOTE

Switching the Windows Mode to the Microsoft Teams Mode.

In the Windows mode, go to  >  > **Skype** > **Login** to switch to Skype for Business account.

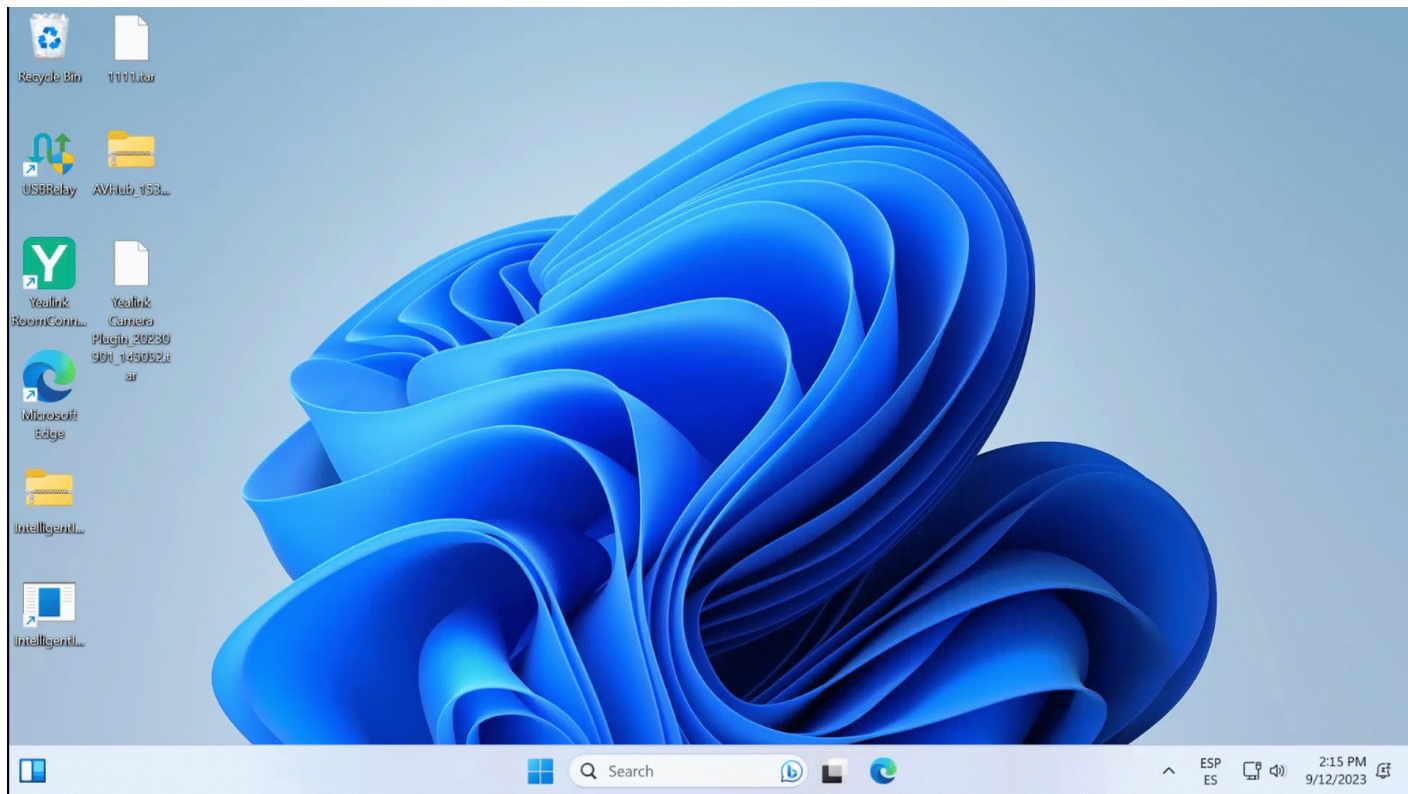

Check Firmware Version

Check Window Version

1. In the Microsoft Teams mode, go to **More** > **Settings** to enter the password (default: sfb).
2. You can check the system firmware version in **App version** and **Windows version**.

The screenshot shows the 'Settings' application interface. On the left is a navigation menu with options: About, Account, Advanced, Meetings, Device, Coordinated meetings, Peripherals, Select a background, and Windows Settings. The main content area displays the following information:

- App version:** 4.18.20.0 (highlighted with an orange box)
- Windows version:** 10.0.22621.2134
- Room License:** Microsoft Teams Rooms Pro
- IP v4:** 10.50.67.96
- IP v6:** 2053:10:50:67:7e71:f872:7f47:c035
- Cortana:** Off
- Voice activation:** Off
- Automatic password rotation:** Off
- Microsoft Teams third party notices:** View Notice (button)

At the bottom right, there are two buttons: 'Exit without saving' and 'Save and exit'. At the bottom left, there is a 'Reset Device' button.

Check MVC Devices Version

1. Switch the Microsoft Teams mode to the Windows mode.
2. Open the Yealink RoomConnect application to select the desired device.
3. Select **Device Status** to check the device firmware version.

The screenshot shows the 'Yealink RoomConnect' application window. The title bar includes the Yealink logo and window controls. The main interface features a left sidebar with a 'Return' button and a device image labeled 'MTouchII'. Below the image are menu items: 'Device Status' (highlighted), 'Device Settings', 'Update Device', and 'Device Support'. The main content area displays device details:


- Equipment Model:** MTouchII (with 'Add a remark' link)
- Firmware Version:** 126.410.0.85 (highlighted with an orange box)
- Connection Method:** Network Cable
- Serial Number:** 803061E020002244 (with copy icon)
- Hardware Version:** 126.2.0.0.2.0.17 (with copy icon)


At the bottom right, there is a link for 'Official Website'.

Update MVC


Update System Firmware


► Method 1: Enable Automatic Windows

1. In the Windows mode, select  to go to **Settings > Update & Security > Windows Update > Advanced options**.
2. Enable **Download updates over metered connections (extra charges may apply)**.

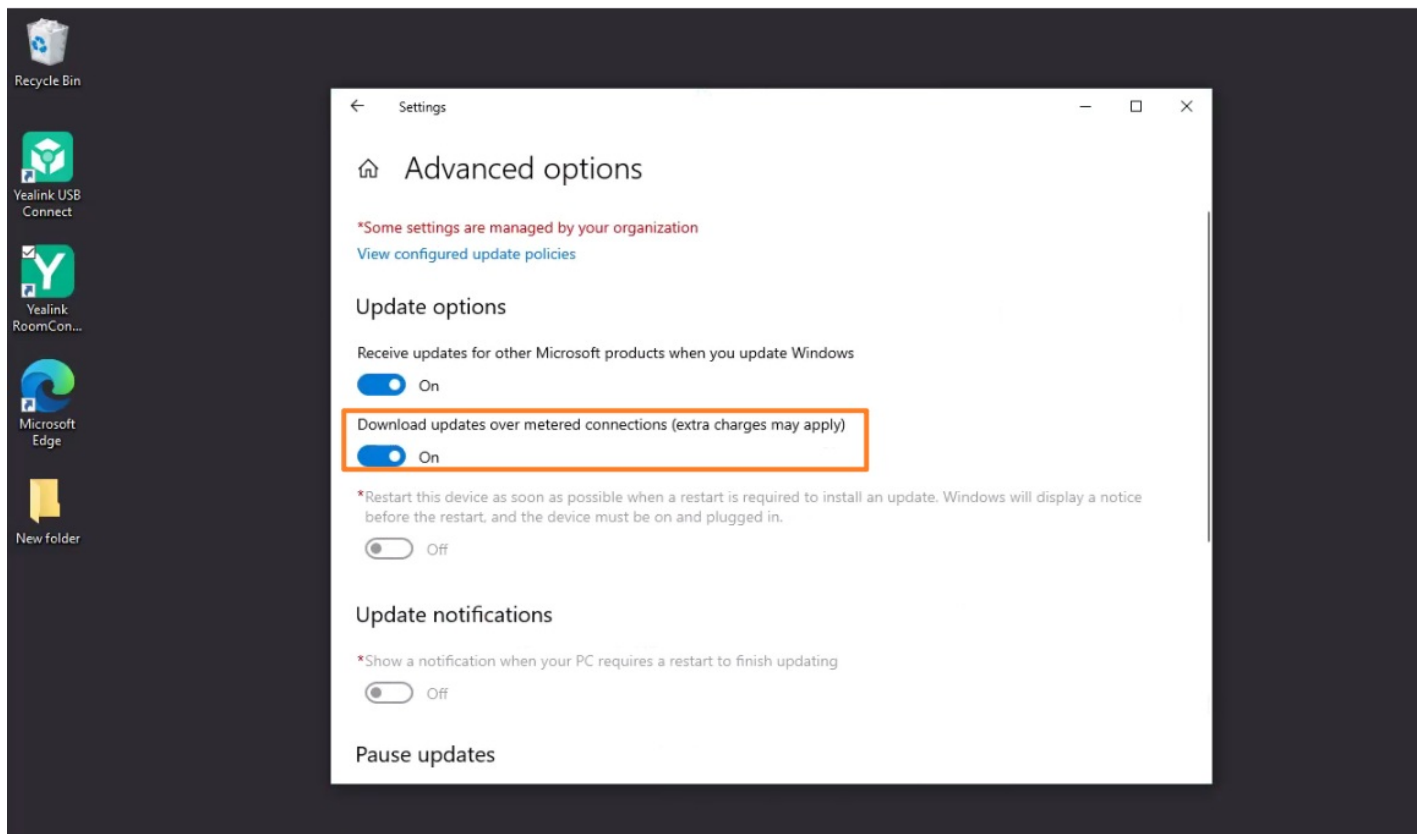

► Method 2: Update Windows Manually

1. In the Windows mode, select  to go to **Settings > Update & Security > Windows Update**.
2. Select **Check for update**.

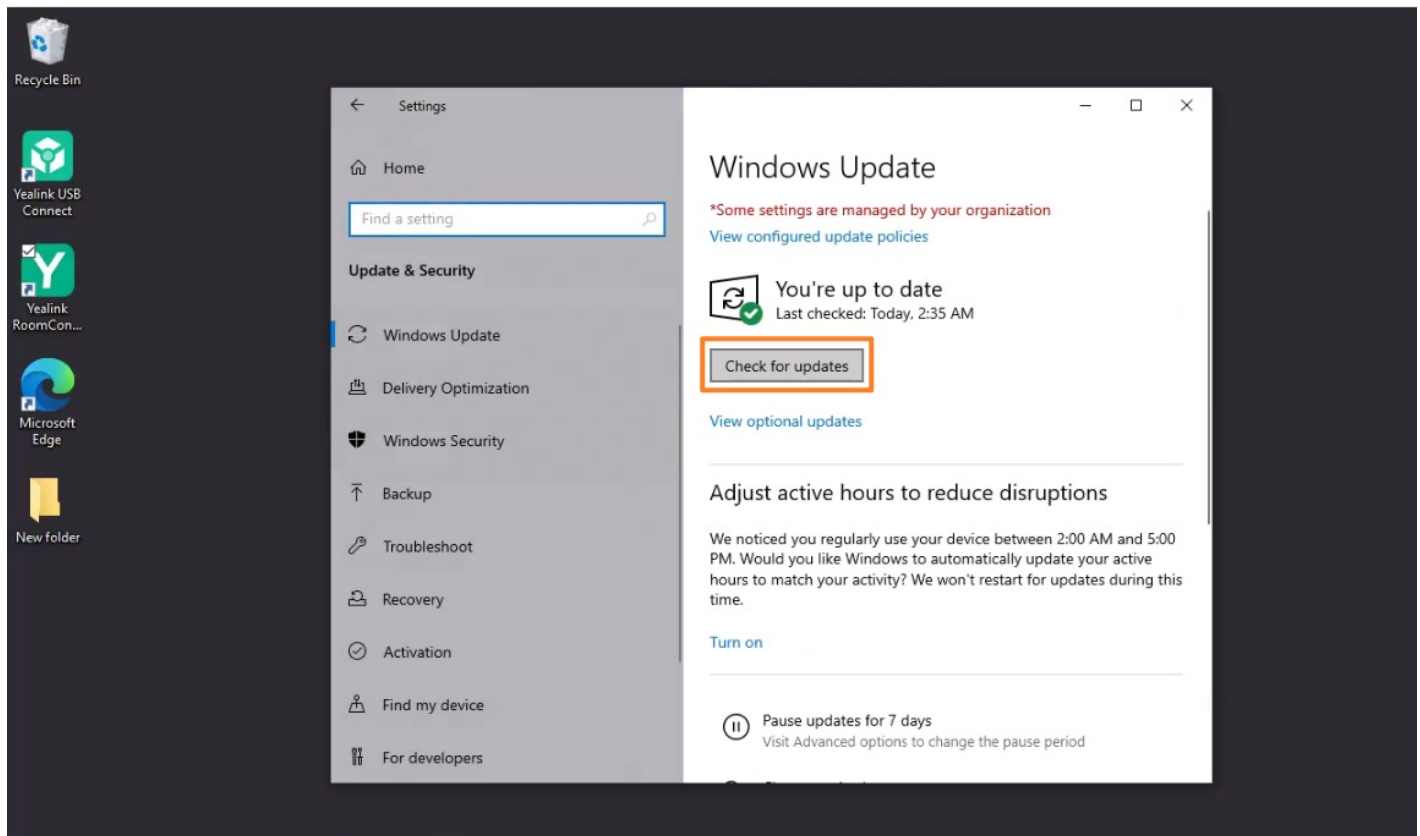


Firmware Update

Update via Yealink RoomConnect

1. In the Windows mode, open the Yealink RoomConnect application to select the desired device.
2. Go to **Upgrade > Upgrade**.


Y Yealink RoomConnect
⚙️ — ✕

← Return



MTouchII

- ☰ Device Status
- 🔧 Device Settings
- 📶 Update Device
- 🛎️ Device Support

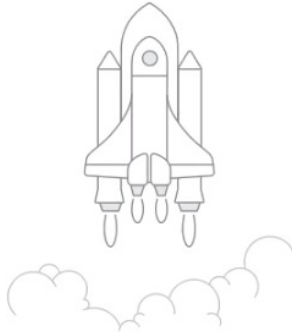

Current version:126.410.0.85

Your software is up to date

When the device has new firmware available, the device will prompt you to update the firmware

Update Manually

NOTE
 You can also update device firmware in batches through the Yealink Device Management Platform. Please refer to [Firmware Update](#).

Test Before Using

Before using the meeting room system, we recommend the administrator do the following to ensure normal use.

Description	Related Document
Test video: Ensure the local images can be displayed usually during the meeting.	Basic Settings
Test audio: Ensure the local audio collection is normal during the meeting.	Audio Collection
Test meeting: Ensure you can enter the meeting usually.	Instant Meeting Join Meeting
Test screen sharing: Ensure you can use the screen sharing usually during the meeting.	Share Content via Cable Share Content via WPP20

FAQ

After the MVC device is turned on, the MTouch II interface prompts: Please connect to the console to complete the setup?

MVC system cannot log in to Microsoft Teams?